



WAT IS H₂S?

H₂S is een gas dat kan vrijkomen uit hete bitumen.

- H₂S heeft een duidelijk herkenbare “rotte eieren” lucht, maar:
- H₂S kan het reukvermogen beperken, dus geur is geen een betrouwbare manier om de aanwezigheid ervan te detecteren.
- H₂S is irriterend, giftig en kan misselijkheid en bewusteloosheid veroorzaken en kan in extreme omstandigheden fataal zijn.

WEES VORZICHTIG!
Vertrouw niet op geur om H₂S te detecteren.

ALS JE VERMOEDT DAT JEZELF OF IEMAND ANDERS IN AANRAKING IS GEWEEST MET H₂S:

- Verlaat het gebied onmiddellijk.
- Informeer het management van de site.
- Bel onmiddellijk de nooddienst.


Meer informatie kan gevonden worden op de Eurobitume website:
www.eurobitume.eu

By consulting and/or using this publication, the user acknowledges and agrees to be bound by the following stipulations. Eurobitume has made considerable efforts to compile this publication on the basis of reliable sources. However, Eurobitume cannot and does not guarantee the completeness, accuracy, reliability and effectiveness of the information contained in this publication for whatever purpose. Furthermore, the content of this publication may be changed, suspended, revised and/or removed by Eurobitume, at its sole discretion, at any time for whatever reason and without notice. Finally, but for cases of fraud, neither Eurobitume nor its members are liable for any loss, damages or injury whatsoever relating to the consultation or use of this publication, or the inability to do so.

Eurobitume, January 2020, info@eurobitume.eu




HET MANAGEN VAN DE H₂S RISICO'S TIJDENS HET WERKEN MET BITUMEN

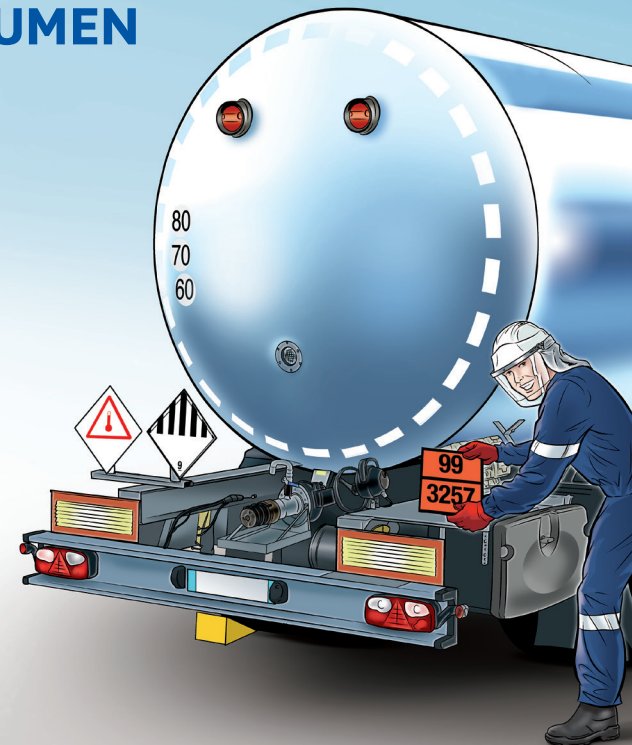



RISICO'S TIJDENS HET LADEN EN ONTLADEN

- Bitumen kan H₂S bevatten, dat kan ophopen in tanks gedurende opslag en transport.
- H₂S kan vrijkomen tijdens operaties.
- H₂S is zwaarder dan lucht en kan zich verzamelen in lager gelegen plekken.

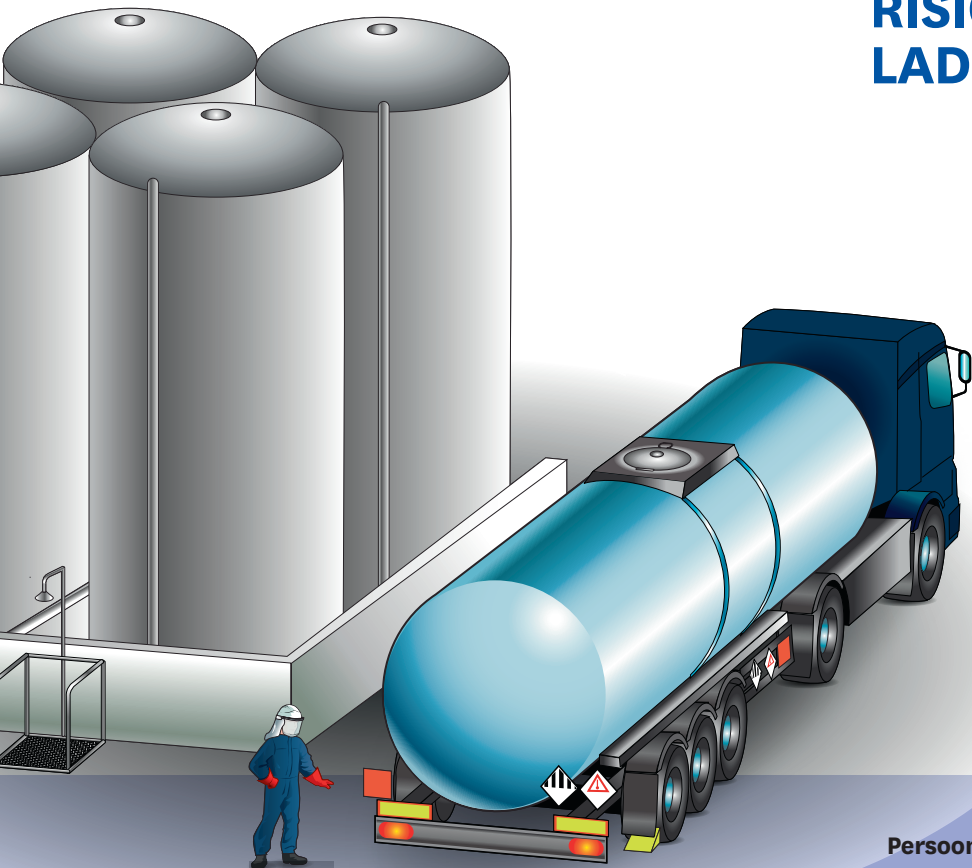

WEES VORZICHTIG!

Persoonlijke blootstelling aan H₂S kan een risico met zich meebrengen.

HOE KUNNEN H₂S RISICO'S VERMINDERD WORDEN?

Tijdens het openen van een afsluitklep:

- Ventileer, of ontluicht de tank, indien de afsluitklep geopend moet worden.
- Open de afsluiter en verwijder jezelf.
- Buig niet over de opening.
- Adem de dampen niet in.

Bediening van het voertuig vanaf de grond heeft de voorkeur tijdens het ontladen.



WEES VORZICHTIG!

Breng jezelf niet in gevaar.